


# User' s Manual

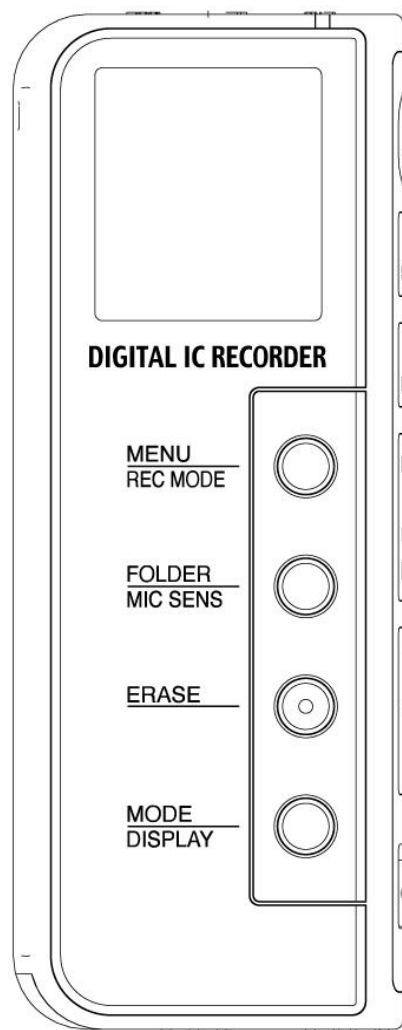

DR1064/DR1128/DR1256/DR1512/DR11024

Dyne Telecom Co., Ltd.

# Contents

<b>Preparation.....</b>	<b>3</b>
Precautions.....	3
Prout Features.....	4
Accessories.....	5
Before Using the unit.....	5
What is MP3/WMA?.....	6
Layout and Function Keys.....	7
<b>Function Description .....</b>	<b>7</b>
How to Power ON/OFF .....	7
Mode Setting.....	8
How to set mode.....	8
<b>Voice Mode .....</b>	<b>8</b>
Button Description.....	8
Description of LCD whilst recording .....	11
Recording & Pause.....	11
Pause While recording .....	12
Chainging record type while recording .....	12
How to check the remaining time while recording .....	13
Changing recording sensivity while recording .....	13
Connecting to the External Device.....	14
Connecting to the External Microphone.....	14
Recording from Telephone.....	14
Playback & Pause .....	15
Pause.....	15
Playing previous / Next file while playing.....	16
Fast Forward / Fast Rewind .....	16
Changing Time Display while playing back .....	16
Section Repeat.....	16
Displaying File Information.....	17
File Deletion .....	17
Changing Folder .....	17
Using Hearing Aid Function .....	18
Menu Setting .....	18
Function Setting Menu.....	18
System Setting Menu .....	19
<b>Radio Mode .....</b>	<b>27</b>
Button Description.....	27
Preset Setting .....	29
Using Preset.....	30
Preset Deletion .....	31
Radio Recording and Changing the Record Folder .....	31
Menu Setting.....	31
Music Mode.....	33
Button Description.....	33

LCD Display description while playback .....	34
Playback / Stop.....	34
Pause.....	35
Playing back previous/Next song while Playback .....	35
Fast Searching.....	36
Selected area repeat function(A- B) .....	36
File Deletion .....	36
Using Hearing Aid Function .....	37
Menu Setting .....	37
<b>Using by connecting to PC .....</b>	<b>39</b>
File Upload/Download.....	39
Mass Storage Driver Installation for Windows 98.....	40
Font Download (Language support) .....	40
Driver Installation .....	40
Font Download.....	40
Listening to recorded file.....	41
Express Media Player installation.....	41
Playback the recorded file.....	44
Special Utility.....	45
Special Utility Installation.....	45
Special Utility Execution .....	47
Connecting to PC.....	47
Specification.....	51
Trouble shooting.....	52

## Preparation



### Precautions

Please Read the following precautions before using the unit.

Any problem happened without reading this precaution is not Dyne telecom's responsibility.

- Do not use the unit for other purposes which are not recommended in this manual .
- Do not impact the unit by strong stock or shaking. Or it may cause a serious problems on unit.
- Do not use or place the unit in hot, humid, strongly vibrated and strong magnetic places.
- Be careful that the unit does not get wet. As this may cause critical damage that could be impossible to repair. If the player gets wet then please wipe the unit with a dry towel and contact the service center.
- When other materials are on the unit, wipe it out with soft cloth or towel. Do not clean the unit with inflammable solvents like alcohol, benzene and thinner,

etc.

- Do not disassemble & assemble the unit by yourself. It will not covered by Dyne's A/S
- Check the polarity before you use the battery.
- When you are not going to use the unit for a long time, remove the batteries to prevent damage from battery leakage and corrosion.
- Please plug in / unplug the earphone or cable by grasping the plug connector. This may cause a break in the wire.
- Do not make a shock or a shake while the USB is connected to the PC.
- Case of any data loss saved in the unit by user mistake or unit breakdown, dyne telecom does not have any responsibility to compensate for your data loss.
- If the hold Button  is locked, the player is not working. Unlock the hold  button.
- Do not carry the battery with other metallic items, as it can cause a fire because of the short of battery that is used in the player.
- Watch out the scratching from the Papers or Wrap paper.
- Please take care not to be hurt while opening the battery cover or by product edge.
- Using the earphone for long time will cause some problem on your ear. So, do control the use time.
- Do not use the earphone while you are driving because it is so dangerous.
- Do not hear the earphone with full volume when you walk by the crosswalk.

## Copyright Protection

1. You cannot use the TCV, TVF files produced by Digital Audio Player for the purpose of commercial purpose. They can be used for personal purpose only.
2. This company reserves all the copyrights of the contents of this publication and Digital Audio Player software. So, we notice that you cannot reproduce, copy or translate any part of this publication into any language in any form without the prior written consent of the copyright holders.
3. It could be illegal to use or duplicate the recordings beyond a private purpose

## Product Features


- Full Graphic & Icon LCD
- FLEXISPEED Control : 6 levels
- Multi Format Support : MP3 and WMA Format
- EQ Function : 8 different EQ support : NORMAL(FLAT), POP, CLASSIC, JAZZ, ROCK, AUTO, USER, 3D
- Multi Language Support : Korean, English, Japanese, Chinese etc.
- Support Multi Language Menu OSD(Korean / Japanese / English)

- External Stereo Recording : Real time recording to MP3 file by connecting to external audio device.
- Mass Storage : Used as a portable storage device.
- Firmware Upgrade available via the USB
- Navigation : Anytime file selection is available while listening to music by Navigation file search function
- FM Radio Listening and Recording Function : Automatic saving, Automatic search 24 Preset of FM Radio.
- Voice Recording : Voice Recording Function via the built-in microphone  
( Recording time: about 45hrs and 30min, 128MB memory )
- Folder : Can be stored 199 message in one folder
- Repeat Function : Multi Repeat function for Language Study : Intro, Selection repeat, one file or all of files repeat function, Random playback function
- Clock(Alam, Reseved Recording)Function
- Screen Saver
- Built in Speaker

## Accessories

Earphone, USB Cable, Audio Cable, Installation CD, Battery(AAA) X 2, Hand Strap, User's Manual, Telephone Cable, Telephon Adaptor, Carriage Bag, External Mic.

\*Optional Item : AC/DC Adaptor

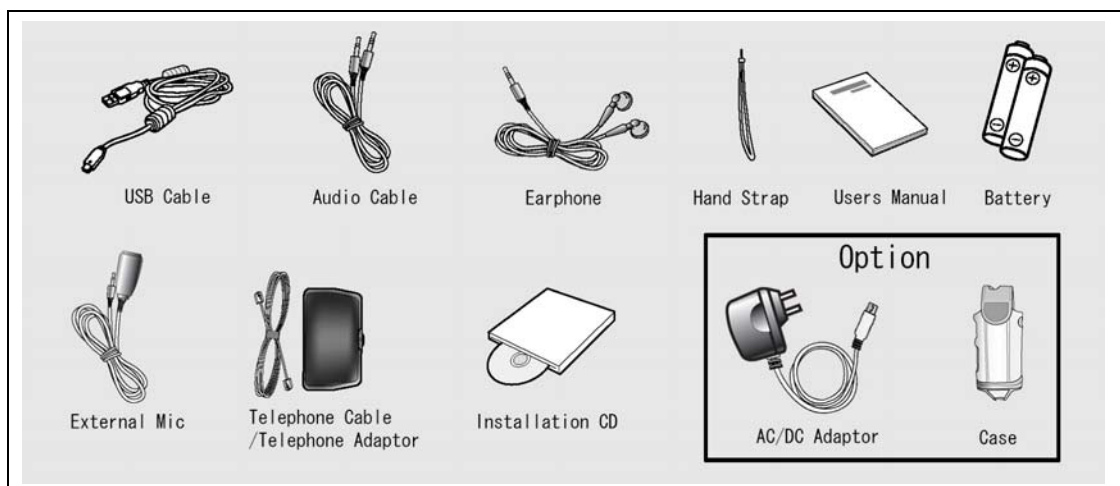


## Before Using the unit

### Step 1 : Inserting the batteries

1. Slide to ▷(on the cover) direction and lift the battery cover.
2. Insert two batteries(AAA) with correct polarity, and close the cover.

3. The battery indicator shows the battery consumption .
4. The unit have a small rechargeable battery in side to preserve time & settings. However, if 1 hours or 10 hours (In case a small Rechargeable battery is charged for an hour) is passed without batteries, the time & settings can be erased. In this case, input time and settings like alarm etc. again after inserting new batteries.

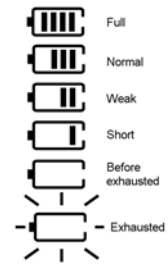

### **Caution**

- Do not take out batteries while operating. It can cause severe malfunction.
- Be sure to replace batteries while power down.
- Do not use different types of batteries together.
- Be sure to replace both batteries with new ones when replacing the batteries.
- Do not recharge batteries and follow the instructions of battery manufacturer.
- Take out batteries to protect the unit if you do not use the unit for a long time.

### **Battery Life & Good Usage**

The battery running time of consequent using is about 15 hrs 30 min. for voice recording and 28 hrs(Earphone volume 10) for playback in voice mode.

The battery consumption for recording is more than playback.

To turn the volume up in playback need more consumption of battery. Therefore, if you use the unit with earphone at lower volume level, you can save batteries.

### **Step 2 : Setting Date and time ( Refer to 24page)**

#### **What is MP3/WMA?**


- What is MP3?

MP3 is the shorten word of MPEG-1 Audio Layer 3 and audio data compression technology. Usually, it means MP3 file type music data. The MP3 file is compressed to the size of 1/12 of normal CD fille and sounded like CD.

- What is WMA ?

A popular alternative to MP3, Microsoft's WMA(Windows Media Audio) format can compress files into even smaller sizes while retaining audio quality. A general compression rate of 1/24 in relation to CD-DA(Compact Disc D


## Layout and Function Keys

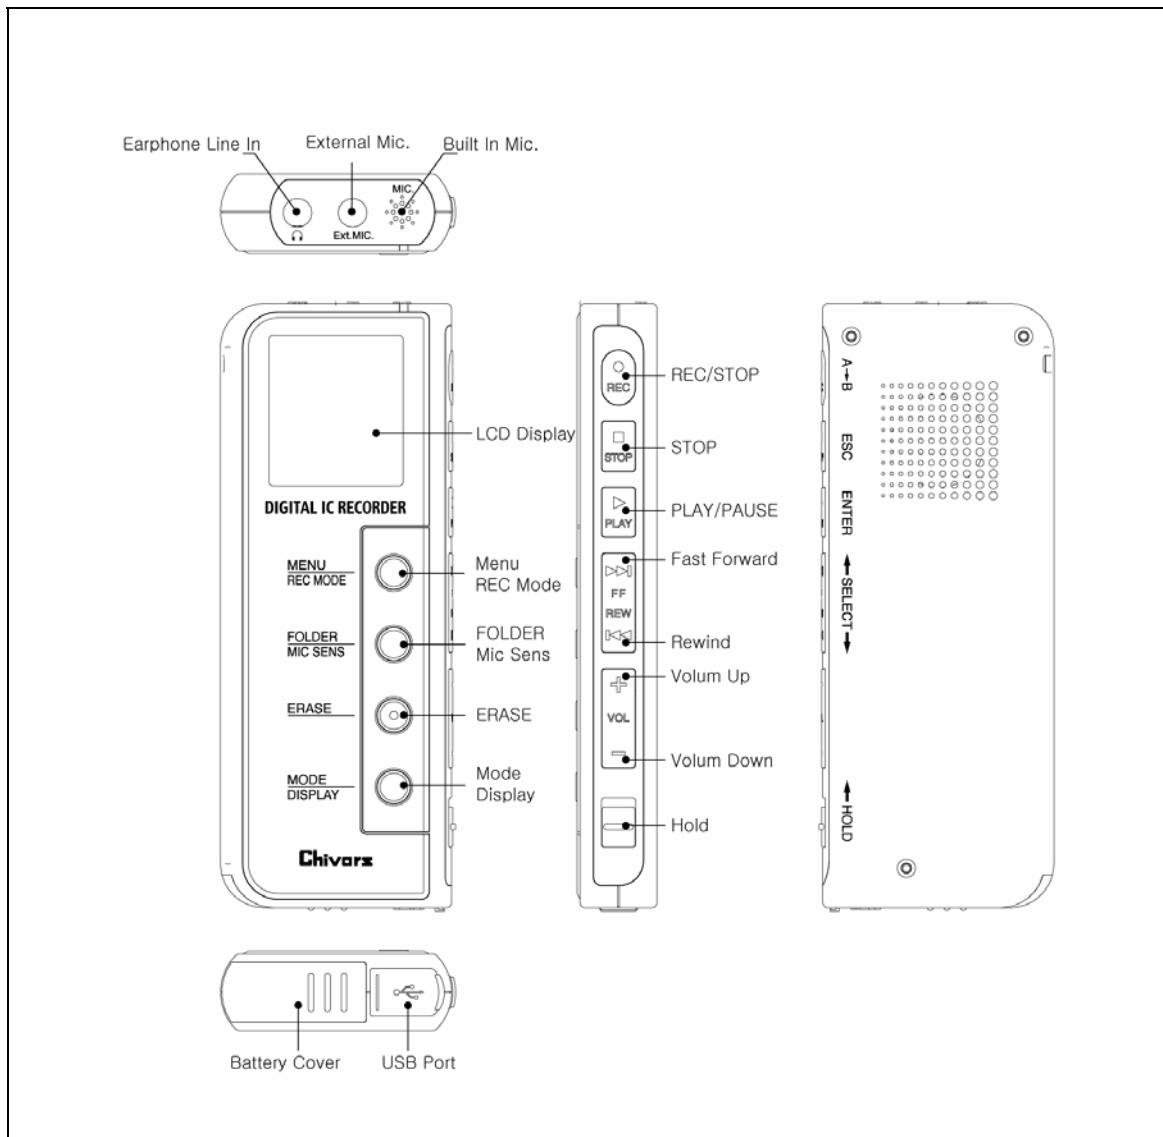


## Function Description

### How to Power ON/OFF

This product has automatic power off function. If the time passes 3 minutes without any use, the power is cut off automatically.

To turn power off directly, Set the HOLD  button on.


To turn power on, release the HOLD  button and press any key.


In case press any key in Hold mode, the current time will appear for about 5 seconds and disappear. To use the player again, release the HOLD  button to off.

## Mode Setting

This unit is divided into three modes like VOICE MODE, RADIO MODE and MUSIC MODE. Select Voice Mode to record. Select Radio Mode to listen to Radio and select Music Mode to playback files.

### How to set mode



Press Mode/Display  button for a long to select a mode

Using FF button or REW  button, select Music→Voice→Radio mode.





After Selecting Mode, press play key then, the selected mode will be adapted..

## Voice Mode




### Button Description

Key	Status & Method		Key Description
 Menu	Stop State	Long Press	Go to Main Main
	Playback State		
	Recording State	Short Press	Recording Method(SHQ,HQ,SP,LP)Change
 Folder	Stop State	Short Press	Recording folder(A,B,C,D)Change
	Playback State	Short Press	Go to Navigation mode
	Recording State	Short Press	Adjusting Mic Sensitivity level


 Erase	Stop State	Short Press	Deleting file
		Long Press	Deleting all the files in the folder
 Mode/Display	Stop State	Short Press	Displaying current time and the information of the recorded file
		Long Press	Mode Change
	Playback State	Short Press	Displaying the information of the recorded file
		Long Press	Mode Change
Recording State	Short Press	Displaying the remaining time according to memory size	
 REC	Stop State	Short Press	Recording start
		Long Press	Hearing Aid Function
	Playback State	Short Press	Section Repeat
	Recording State	Short Press	Pause Recording
 Stop	Playback State	Short Press	Playing Stop
	Recording State	Short Press	Recording Stop
	Menu State	Short Press	Canceling current selected file and Move to upper stage
 Play	Stop State	Short Press	Playback Start
	Playback State	Short Press	Playback Pause
	Menu State	Short Press	Saving current file and escaped
 FF	Stop State	Short Press	Move the cursor to the upper file
	Playback State	Short Press	Playing next file

		Long Press	Fast Forwarding Search
	Menu State	Short Press	Move the cursor to the next or change the value up
 REW	Stop State	Short Press	Move the cursor To the lower file
	Playback State	Short Press	Playing former file (In case of Playing within 10sec) Playing current file (In case of playing after 10 sec)
		Long Press	Fast rewinding search
	Menu State	Short Press	Move the cursor to the previous or change the value down
 Vol +	Stop State	Short Press	Volume up (Max 20)
	Playback State		
	Recording State	Short Press	Volume up Mic Sensivility Up (In case of pressing folder button)
	Menu State	Short Press	Set the value up for the selected part
 Vol -	Stop State	Short Press	Volume down
	Playback State		
	Recording State	Short Press	Volume down / Mic volume down
	Menu State	Short Press	Set the value down for the selected part
 Hold	Stop State	OFF	Turn Off
	Playback State	ON	Hold


	Recording State	ON	
--	-----------------	----	--


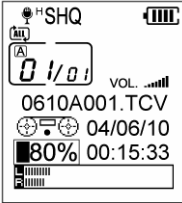

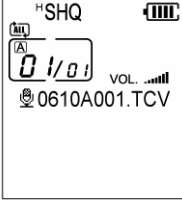
\*Navigation Function : Press folder  button and go to Navigation Mode while playingback, you can select desired file using FF or REW  button. By pressing play  button shortly in the state of file selection, the selected file will be played back.

### Description of LCD whilst recording

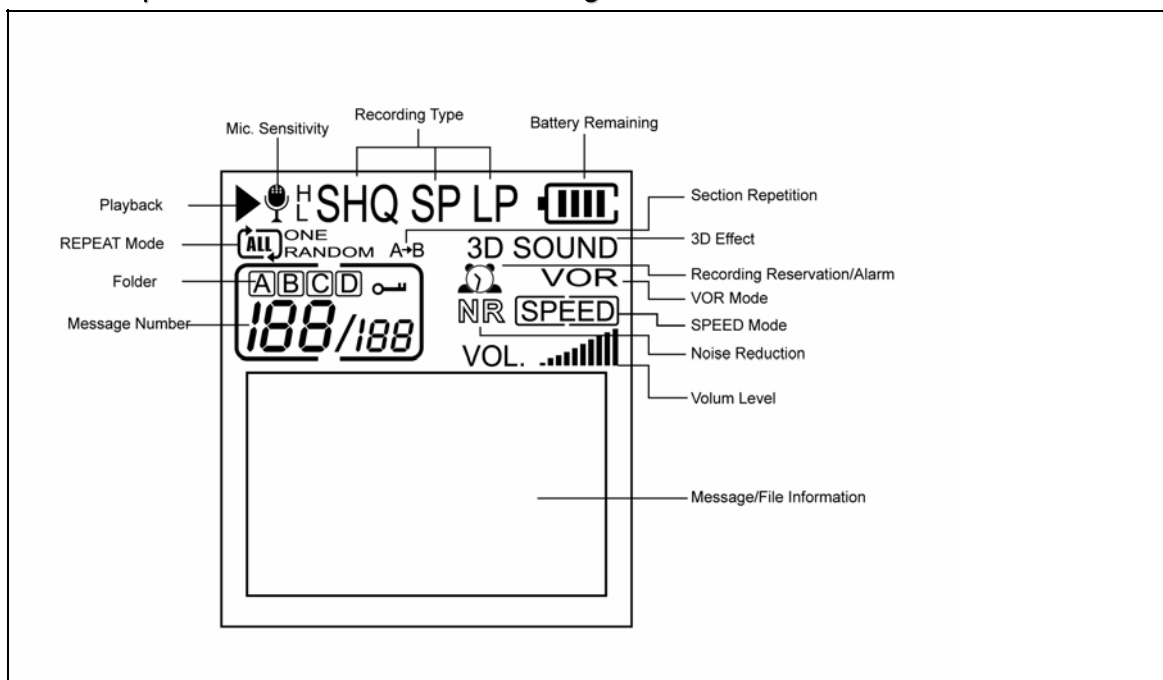


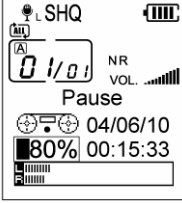

### Recording & Pause

Description	LCD
1. Choose the folder  you want to record by folder button in the voice mode	

<p>2. After placing Mic. to the sound source press REC  button shortly to record</p>	
<p>3. Press Stop  button shortly to stop while playing</p>	


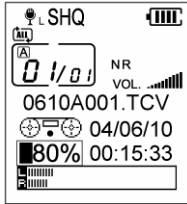
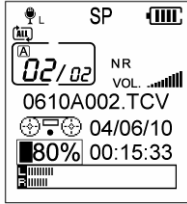
- Try test recording not to fail recording
  - The number of recording will be automatically saved next to the last recorded file
  - Be careful not to scrub the surface of the player while recording to prevent the noise to be recorded.
- Be careful not to pull out the battery while recording to prevent the malfunction of the player.

### Pause While recording

Description	LCD
<p>1. Pause by pressing REC  button shortly while playingback.</p>	
<p>2. Pause maintains 10minutes. After 10minutes, converted waiting mode.</p>	


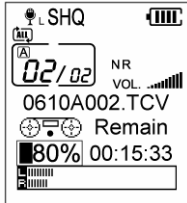
### Chainging record type while recording

Description	LCD
-------------	-----


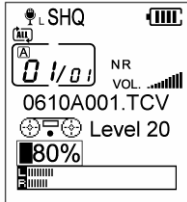

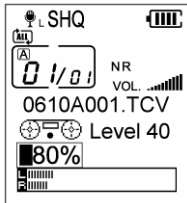
<p>1. By pressing Menu  button, Change the mode to SHQ→HQ→SP→LP mode.</p>	
<p>2. After checking selected mode, press menu button about 2 seconds, then recording will be started while the message number is changed.</p>	

\*By changing mode, recording time is extended when the remaining time is insufficient while recording

### How to check the remaining time while recording

Description	LCD
<p>1. By pressing Mode/Display  button shortly, the remaining time shows on the LCD.</p>	

### Changing recording sensitivity while recording



Description	LCD
<p>1. By pressing Folder  button, recording sensitivity shows on the LCD while recording</p>	
<p>2. By pressing Volume  button recording sensitivity can be modified.</p>	

\*When the sound source is weak, the recording sensitivity can be modified to record clearly.

## Connecting to the External Device

### Connecting to the External Microphone


You can easily record the message by using the external microphone.


1. Connect the external microphone to the MIC terminal of the voice recorder.
2. Press REC  button. It starts recording.
3. To stop the recording, press STOP  button again.
4. In case recording by External Mic., the stereo recording is available only in SHQ and HQ mode.


### Recording from Telephone

You can record telephone conversation.

However, you can not record the conversation through the digital telephone.

1. Connect the Voice Recorder to the telephone using telephone adaptor.
2. Press REC  button during conversation. The conversation will be recorded.


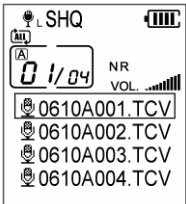

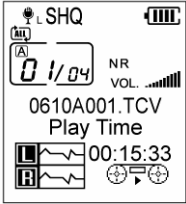

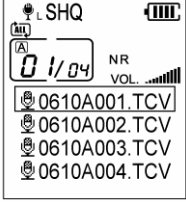
To stop recording, press STOP  button again.

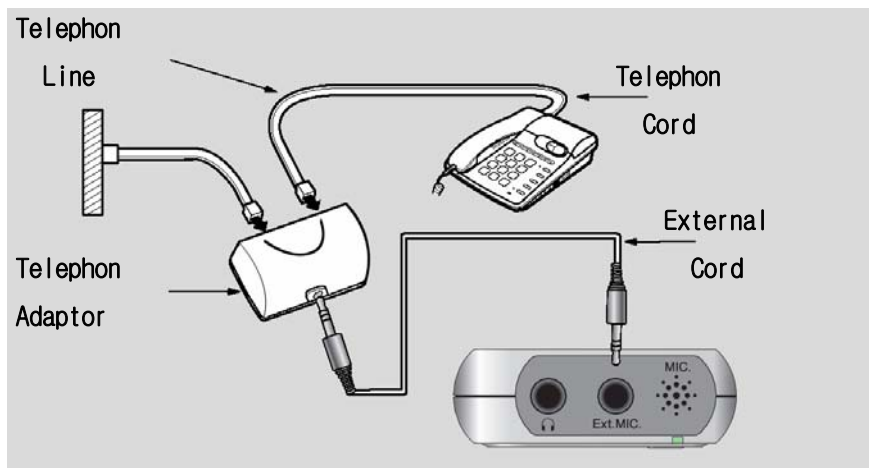


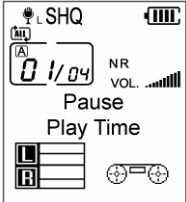
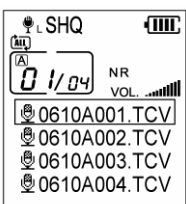
\*Note!

If you do not use the Microphone, Telephone line and Telephone adaptor supplied by us, the set may not work properly.



## Playback & Pause

Description	LCD
<p>1. Choose the file you want to listen by FF or Rew</p>  <p>button.</p>	
<p>2. Press Play  button shortly to play</p>	
<p>3. Press Stop  button to stop.</p>	


## Pause

Description	LCD
<p>1. Pause by pressing Play  button shortly while playingback</p>	
<p>2. Pause will be maintained for 10 minutes. After 10 minutes, pause will be converted into waiting mode</p> <p>.</p>	


### **Playing previous / Next file while playing.**

1. Press REW  button shortly while playback  
Previous song will be upfront in case of playback in 10 seconds.
2. Press  button shortly while playback, it moves to next song  
Ongoing song will begin from the first in case of playback 10 seconds afterward.

### **Fast Forward / Fast Rewind**


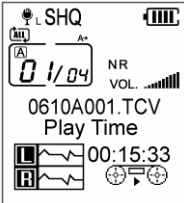

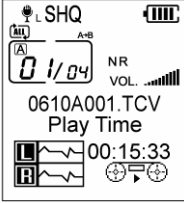

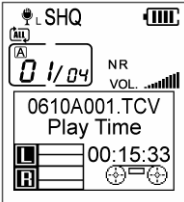
Press FF or REW  button long while playback, it moves fast to previous part or next part of the file in playback.

### **Changing Time Display while playing back**

By pressing Mode/Display  button, the display on the LCD changes Playing time→Remaining time→Recording date→Recording time.

### **Section Repeat**



Section repeat function is the listening of certain section file repeatedly

Description	LCD Display
1. While playing, Press REC  button shortly, “ A → “ will be displayed on LCD and then Starting point of section repeat will be set.	
2. Press REC  button shortly again, then “A →B“ on LCD will show and work the section repeat.	
3. Press REC  button shortly again. Then, section repeat is released.	

### Displaying File Information

In stop stage, when pressing Mode/Display  button, current time and the information of the selected file will be shown as playback Time → recording Time in order.

### File Deletion

In stop stage of Voice mode, press Erase  button shortly. the selected file will be deleted. When pressing Erase  button long, the selected folder will be deleted.

#### \*Caution

The erased MP3 files cannot be restored. Check before erasing.



### Changing Folder

In stop stage, the folder will be changed to A→B→C→D respectively by pressing

folder  button.

### Using Hearing Aid Function


For using hearing aid function, earphone must be connected to the set.

Connecting earphone, when pressing long REC  button, hearing aid function starts. When pressing stop  button, this function stops.

#### Caution

Before wearing earphone, do not forget to check the sound level which is sometime so strong enough to hurt the sense of hearing of a person who has sensitive ear.





### Menu Setting





Press Menu  button long, then, it will move to Main Menu Setting mode. Main Menu is divided into function setting and system setting. Function setting is to control each mode, and system setting is to control the system related parts regardless of its mode.



\*Press Stop  button shortly in Menu Setting mode. Then, it will escape from Menu Setting mode.

The detail information on each menu is described below.




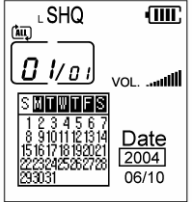

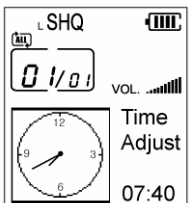
### Function Setting Menu


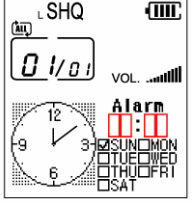

 






 Function Setting	Description	Default
 Repeat	INTRO, NORMAL ONE, NORMAL ALL, NORMAL RANDOM, REPEAT ONE, REPEAT ALL, REPEAT RANDOM	REPEAT ALL
 Screen Saver	OFF, Clock, User's image	OFF
 Play Speed	80%, 90%, 100%, 110%, 120%, 130%	100%

 Mic Sensivity	LOW, HIGH	HIGH
 Record type	LP(6K), SP(32K), HQ(64K), SHQ(128K)	SHQ(128K)
 VOR VOICE OPERATING RECORD	VOR OFF, VOR ON	VOR OFF
 Noise Reduction	Noise Reduction OFF, Noise Reduction ON	Noise Reduction OFF

\* Pressing FF or REW  button in the main menu, it moves to system setting menu. By pressing stop  button, it will escape from main menu.  
The detail information on each menu is described below.

### System Setting Menu

 System Setting	Description	Default
 Sleep Mode	OFF(0Min~240Min)	OFF
 DATE Date		
 Clock Adjust		





 
 

 Alarm		
 Recording Time Preset	Voice Recording, Radio Recording	Voice Recording
 Language	Japanese, Korean, English	Japanese
 LCD Backlight	OFF, 1 ~ 20sec	LCD Backlight ON
 LCD Contrast	0~20	10
 Beep Sound	0~20	10
 System Information	Memory Size & Version Description	
 System Upgrade	Upgrade & Font Download	
 Initialize	Low Level Format & Initialize all settings	

## Function Setting Menu

### 1. Repeat

The Player provides 7 different repeat modes.

Mode	Description
------	-------------

 Intro	Playback all the file's front for 10 seconds.
 Normal One	Stop after playback one file only.
 Normal All	Stop after playback all the files in Memory.
 Normal Random	Random Playback from first to last files in Memory
 Repeat One	Repeat playback all the files in Memory
 Repeat All	Repeat playback all the files in Memory
 Repeat Random	Repeat playback from first to last files in Memory

## 2. Screen Saver







If it pass some time in Playback, the LCD view will change to Watch or User Image. The LCD view is selectable between Watch and User Image in Screen Save function.

### Note!

In case User Image, the interval time between images can be set. The interval time is adjustable from 0.1 sec. to 10 sec. and the set time is applied to the User Image view. For the detail information to use Screen Saver, please refer to „Using Screen Saver Editor“


## 3. Play Speed

To control playback speed


Mode	Description
 Speed 130%	Playback of 130% speed rate
 Speed 120%	Playback of 130% speed rate
 Speed 110%	Playback of 130% speed rate
 Speed 100%	Playback of 130% speed rate
 Speed 90%	Playback of 130% speed rate
 Speed 80%	Playback of 130% speed rate

**\*Note**

LP(Long Play)recording is only being played with Normal Play speed,100%.


4. Mic Sensitivity 

Adjusting the Recording Sensitivity according to the level of noise in surround.

Select recording sensitivity by pressing FF or REW  button.

MIC HI(High Sensitivity)	MIC LO(Low Sensitivity)
Sound source is far or there is little noise.	Sound source is near or there in much noise

- \* On the LCD selected recording sensitivity will be shown as H or L.
- \* When executing microphone recording, selected recording sensitivity will be adapted.

5. Voice Operated Recording 

VOR(Voice Operated Recording) function is that the unit records only when sound

exists.

### SETTING VOR RANGE

#### 1. Automatic Setting

1-1. Start Recording.

1-2. Make the circumstance quiet after pressing Erase button shortly.

\* The dot line of Level bar on the bottom of the LCD changes to maximum value of the input sound and becomes the standard range of the VOR.

1-3. It searches the applicable VOR range by flickering the VOR icon on the upper side of the LCD for some time.

1-4. It will stop the flickering of the icon in some time and save the VOR Range value. The saved value will be last before re-setting it.

#### 2. Manual Setting

2-1. Start Recording

2-2. Change the VOR Range using FF/REW button.

#### \*Note




Test the Mic. Sensitivity by changing it when it needs to have more sensitivity or the VOR is working continuously in a loud place.

#### 6. Noise Reduction

To reduce noise when playing recorded file.

#### 7. Record Type

This player provides 4 different record quality types.

Mode	Description
 Super High Quality	Record with 128Kbps
 High Quality	Record with 64Kbps
 Standard Play	Record with 32Kbps

 Long Play	Record with 6Kbps
---	-------------------

**\*Note**  
 \*Lower bit rate is able to provide longer recording time but low sound quality.

## System Setting Menu


### 1. Sleep Mode


If Sleep Time is set on, the unit is powered off automatically after the set time

### 2. Date Setting

See the current date, recorded date, recorded time and playback time by

Date Setting. Select Year, month and date by FF or REW  buttons and


Adjust them by Vol+ and Vol-  buttons. The adjusted date will be

applied in when press Play  button after the Date setting.

### 3. Time Setting

See the current time, recorded time and playback time by time setting.



Select time and minute by FF and REW  buttons and adjust them by Vol+


and Vol-  buttons. The adjusted time will be applied in when press

Play  button after the Time setting.

### 4. Alarm Setting


Alarm will be activated if it is set on. Select Time, Minute, Day by FF or

REW  buttons and set the Alarm time and day by Vol+ or Vol-  buttons.


The alarm will be set on after set the alarm time and press the Play  button.


## 5. Recording Time Reservation


If the date and time are reserved by this function, it will be recorded on the reserved time. Select Voice Recording and Radio Recording by FF or REW

 buttons.


- Select Voice Recording


Set the date and recording time length(hr:min) by FF or REW  buttons


after press Play  button. The recording reservation is set on when

press Play  button after completion of the setting.



- Select Radio Recording

Select the Radio station to be recorded by Vol+ or Vol-  buttons and



select the Day, Time and recording time length(hr:min) by FF or REW 

buttons after press Play  Key. The recording reservation is set on when press Play button after setting.

## 6. Language



Select one language among Korean, Japanese and English by FF or REW  button. If press Play  button after language selection, the menu and all description will be displayed by the selected language.

## 7. LCD Backlight



LCD Backlight supports to see the LCD display in the dark place. Set the Backlighting time by FF or REW  button after press Play  button. The time can be adjusted as 0~20 sec. by 21 steps.

## 8. LCD Contrast

Adjust the LCD contrast.

Select the preferred LCD contrast by FF or REW  buttons after prsee Play  button. LCD Contrast can be adjusted as 0~20 by 21 steps.

## 9. Beep Sound

Adjust the beep sound volume by FF and REW  button after press Play  button. Beep sound can be adjusted as 0~20.

## 10. System Information

It displays the information of total memory capacity, available memory capacity and Software version.

## 11. Upgrade and Font download

User can upgrade and download the fonts for the player.

**Caution!**

Be careful the USB cable is not disconnected while upgrading and font downloading.

**Note**

Refer to the “Font Download“ for the detail.

**12. Initialize**





Initialize the Menu setting value after memory format.

**Caution!**



Low Format may take several minutes depending on the memory size. Be careful the power is not off while format.

## Radio Mode

**Button Description.**

Key	Status & Method		Key Description
 Menu		Long Press	Move to Menu mode
 Folder		Short Press	Change Recording Folder(A,B,C,D)
 Erase	Preset	Long Press	Erase current Preset
 Mode/Display		Long Press	Change Mode
		Short Press	Start Recording

REC		Long Press	Save Manual Station
 Stop	Searching station automatically	Short Press	Stop Searching
	Menu	Short Press	Cancel current selected category and move to upper class.
 Play		Short Press	Select preset mode and frequency manual mode.Preset
		Long Press	Search station automatically
	Menu	Short Press	Save current selected station and escape from The menu
 FF	Preset Mode	Short Press	Move to the next preset
	Frequency Manual Mode	Short Press	Set Frequency up, Searching Frequency manually
	Frequency Manual Mode	Long Press	Searching Frequency automatically
	Menu	Short Press	Move cursor to the next part or set the value up
 REW	Preset Mode	Short Press	Move to previous Preset
	Frequency Manual Mode	Short Press	Set Frequency down
	Frequency Manual Mode	Long Press	Searching the Frequency automatically
	Menu	Short Press	Move cursor to the previous part or set the value down
 Vol +		Short Press	Volume up
	Menu	Short Press	Set the value up for the selected menu


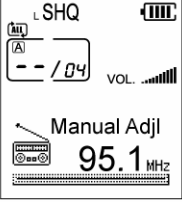

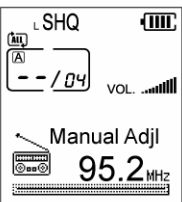



 Vol -		Short Press	Volume down
	Menu	Short Press	Set the value down for the selected menu
 Hold		ON	Power Off


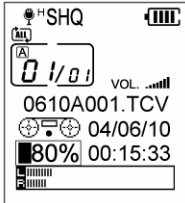
## Preset Setting

Save your preferred radio station and listen easily later time.


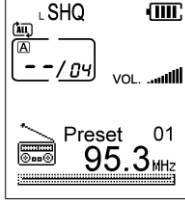
To set the Preset, there are manual setting and automatic ways. The detail usage information is following.

### 1. Manual Setting

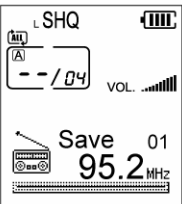Description	LCD Display
1. Press Play  button in case of preset mode, then select the manual frequency setting mode.	
2. By using FF or REW  button, select the broadcasting you want to listen.	
3. Press REC  button long ,then, the preset number is selected. Change to ohter number using REW or FEW  button.	


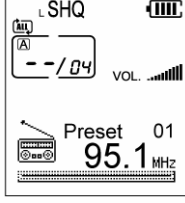

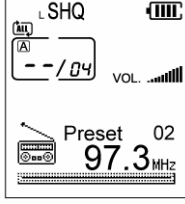
<p>4. press REC  button shortly, currently selected broadcasting station will be recorded.</p>	
---	--

## 2. Automatic Setting


Description	LCD Display
<p>Press Play  button long and automatically set the Preset value..</p>	

\* Note : Earphone has an antenna function. So, do not remove the earphone from the unit.


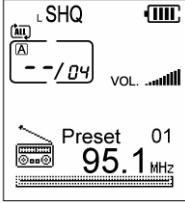
## Using Preset

Description	LCD Display
<p>1. Preset No. And ,Preset' will be displayed when press Play Key  shortly.</p>	
<p>2. Move to the previous or next preset by pressing FF or REW  key.</p>	


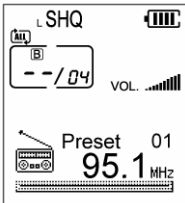

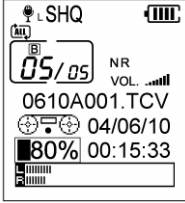

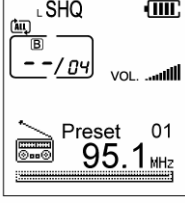
### NOTE

Search the nearest station to the current one by pressing FF or REW  button in the Manual frequency search mode.

## Preset Deletion

Description	LCD Display
<p>1. IF press  button long, the preset will be erased one by one, and the Preset numbers after the erased one will be erased one by one too.</p>	


## Radio Recording and Changing the Record Folder

Description	LCD Display
<p>1. Select the folder to be recorded by pressing Folder  button</p>	
<p>2. Record the Radio by pressing REC  button after select the station.</p>	
<p>3. Stop the recording by pressing the STOP  button.</p>	




## Menu Setting

Press Menu  button long, then it will enter into Main Menu.

Main Menu is divided into function setting and system setting. Function setting is to control each mode, and system setting is to control the system related parts regardless of its mode.

\*Press Stop  button shortly in Menu Setting mode. Then, it will escape from Menu Setting mode.





The detail information on each menu is described below.

 Function Setting	Description	Default
 Record Type	LP(6K), SP(32K), HQ(64K), SHQ(128K)	SHQ
 Radio Band	Japan, Asia/USA, Europe	Japan

## Function Setting Menu



### 1. Record Type

This player provides 4 different record quality types

Mode	Description
 Super High Quality	Record with 128kbps
 High Quality	Record with 128kbps
 Standard Play	Record with 128kbps
 Long Play	Record with 128kbps

### 2. Radio Band









Set the area frequency range and frequency step.





Mode	Description	
 Japna	Frequency Range	76 ~ 90 MHz
	Frequency Step	0.1 MHz
 Asia/USA	Frequency Range	87.5 ~ 108 MHz
	Frequency Step	0.1 MHz

 EUROPE	Frequency Range	87.5 ~ 108 MHz
	Frequency Step	0.05 MHz

## Music Mode

### Button Description







Key	Status & Method		Key Description
 Menu	Stop State	Long Press	Enter into Main Menu
	Playback State		
 Folder	Playback State	Short Press	Change to the Navigation
 Erase	Stop State	Short Press	Delete the selected file
		Long Press	Delete all the files in a folder
 Mode/Display	Stop State	Long Press	Change the Mode
	Stop State		
 REC	Stop State	Long Press	Ear aid function
	Playback State	Short Press	Selected area repeat function
 Stop	Playback State	Short Press	Pause
	Menu State	Short Press	Cancel the current menu and move to upper part
 Play	Stop State	Short Press	Playback
	Playback State	Short Press	Pause the Playback
	Menu State	Short Press	Save the current selected menu and escape out
 FF	Stop State	Short Press	Move the cursor to the upper file
	Play back State	Short Press	Playback the next file
		Long Press	Fast searching to next part




	Menu State	Short Press	Move the cursor to next part or set the value up
 REW	Stop State	Short Press	Move the cursor to the lower file
	Playback State	Short Press	Playback the previous file
		Long Press	Playback the previous file(In case within 10 sec. of playback) Playback the current file!(In case after 10 sec. of playback)
	Menu State	Short Press	Move the cursor to the previous part or set the value down
 Vol +	Stop State	Short Press	Volume Up (Max. 20)
	Playback State	Short Press	
	Menu State	Short Press	Set the selected value up
 Vol -	Stop State	Short Press	Volume Down
	Playback State	Short Press	
	Menu State	Short Press	Set the selected value down
 Hold	Stop State	OFF	Power Off
	Playback State	ON	Hold

### LCD Display description while playback


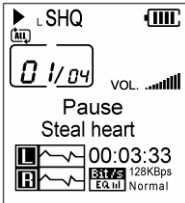
#### Playback / Stop

Description	LCD Display
-------------	-------------


<p>1. Select the file to playback by FF or REW  button</p>	
<p>2. Playback by pressing Play  button shortly</p>	
<p>3. Stop it by pressing Stop  button while playback</p>	


\* Navigation Function : Press folder  button and go to Navigation Mode while playback, you can select desired file using FF or REW  button. By pressing play  button shortly in the state of file selection, the selected file will be played back.

### Pause


Description	LCD Display
<p>1. Pause it by pressing Play Key  shortly while playback</p>	

### Playing back previous/Next song while Playback

1. Playback the previous song by pressing REW  button shortly while playback(within 10sec.)







2. Playback the next song by pressing FF  button shortly while playback(after 10sec.)

## Fast Searching



Fast forward or backward in a song by pressing REW or FF  button while playback.

## Selected area repeat function(A- B)

Listen to the selected area repeatedly in a playback file.



Description	LCD Display
1. When press REC  button while playback, A→ will be displayed on the LCD as a start point.	
2. When press REC  shortly again, A→B will be displayed on the LCD and repeat the area.	
3. To release the function, press REC  shortly again.	

## File Deletion

In stop stage of Music mode, press Erase  button shortly. the selected file will be deleted and press Erase  button long, selected folder will be deleted.

## Using Hearing Aid Function

For using hearing aid function, earphone must be connected to the set.

Connecting earphone, when pressing long REC  button, hearing aid function starts. When pressing stop  button, this function stops

### Caution


Hearing Aid Function is for who has weak sense of ear  
Before wearing earphone, do not forget to check the sound level which is sometimes strong enough to hurt the sense of hearing of a person who has sensitive ear.

## Menu Setting

Press Menu  button long, then it will enter into Main Menu.




Press Menu  button long, then, it will move to Main Menu Setting mode.





Main Menu is divided into function setting and system setting. Function setting is to control each mode, and system setting is to control the system related parts regardless of its mode.

\* Press stop  button shortly in Menu Setting mode. Then, it will escape from Menu Setting mode.

The detail information on each menu is described below.

## Function Setting Menu

 Function Setting	Description	Default
 Equalizer	Normal, Classic, Jazz, Rock, Pop, Auto EQ, User EQ	Normal
 3D Effect	3D OFF, 3D ON	OFF

 Bass Boost	Bass Boost OFF, BASS Boost ON	OFF
 Repeat	INTRO, NORMAL ONE, NORMAL ALL, NORMAL RANDOM, REPEAT ONE, REPEAT ALL, REPEAT RANDOM	REPEAT ALL
 Screen Saver	OFF, Clock, User's Image	OFF
 Play Speed	80%, 90%, 100%, 110%, 120%, 130%	100%

### 1. Screen Saver

If it pass some time in Playback, the LCD view will change to Watch or User Image. The LCD view is selectable between Watch and User Image in Screen Save function.

#### Note!

In case User Image, the interval time between images can be set. The interval time is adjustable from 0.1 sec. to 10 sec. and the set time is applied to the User Image view. For the detail information to use Screen Saver, please refer to „Using Screen Saver Editor“


## Using by connecting to PC

No need to get installation of any software but directly use this device in Window ME, 2000, XP. However, being requested to install „ MASS Storage Driver“ in Windows 98.



Insert provided CD into CD-ROM to make it autorun with „ Installation program“.  
If not, kindly select and click „ INSTALL. EXE“ by manual.

## File Upload/Download

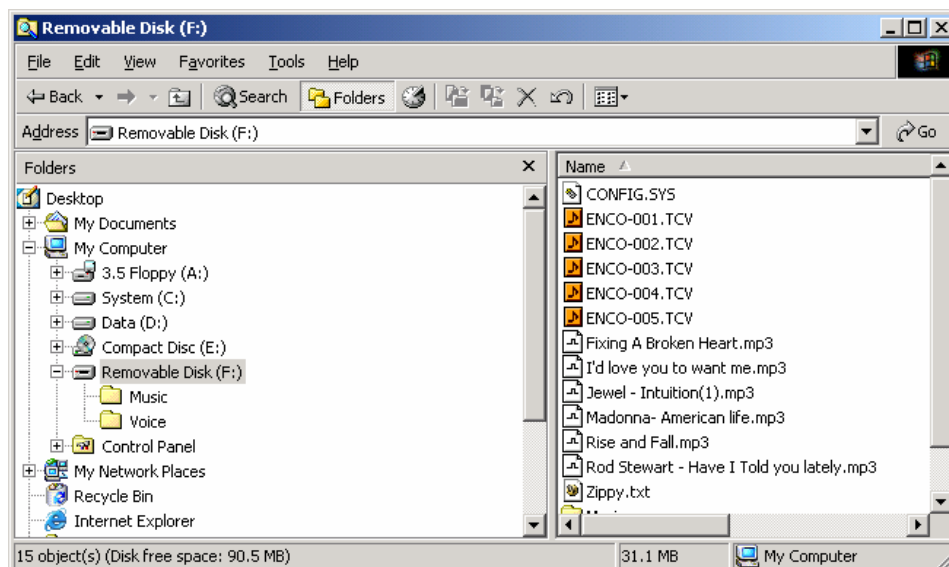

Connected to PC , It is automatically recognized with removable disc.  
 No need to get installation of any software but directly use this device in  
 Window ME, 2000, XP. However, being requested to install „ MASS Storage  
 Driver“ in Windows 98.

### Mass Storage Driver Installation for Windows 98

Select the **Mass Storage Drive for Windows 98** on the menu of INSTALLATION  
 PROGRAM in CD. It will be automatically installed.

### Font Download (Language support)


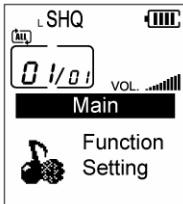



To perform the player with same language as Window’s in PC, need to download  
 the FONT. It is basically built-in when you purchase, to use directly, however,  
 case of using another language, you should get font download in the related  
 language Windows.





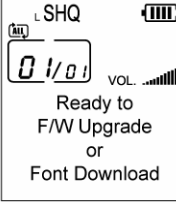
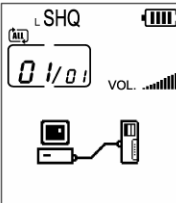
\*Before downloading the FONT, needing to set the DRIVER using the Download  
 program.

### Driver Installation

Driver, which is used to get download the Font, is used to get program upgrade.  
 Select the part of “Driver for Upgrade and Font Download“ in installation  
 program Menu, it will be installed automatically.
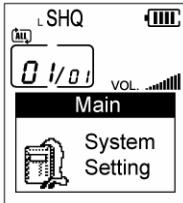
### Font Download

Description	LCD Display
1. Press Menu  button long to move to Menu mode.	
2. Select system setting menu using  buttons. System setting menu will be shown on you like right picture when you press play  button on the menu,	
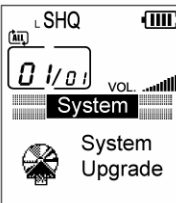
<p>3. Select System upgrad  by using FF or REW  button.</p>	
<p>4. By pressing play  button, upgrade and font download will be stand by.</p>	
<p>5. By connecting the set into a PC using USB cable, the picture like right side will be shown on the LCD.</p>	
<p>6. Execute Font Download Utility of installation program.</p>	
<p>7. Check ,Connected' message on the bottom side of display and press ,Start' button to download</p>	




### Listening to recorded file


After uploading the files(TCV,TVF) recorded on Player, being requested to get "Express Media Player" to playback at PC.

### Express Media Player installation

- 1) Before installation, all of the programs should be shut down.
- 2) Select "Express Media Player" from Installation Program Menu, installation will be started.
- 3) Press <OK> button when the pop window shows.

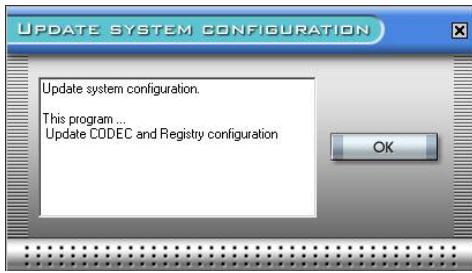

4) Be ready to get installation.

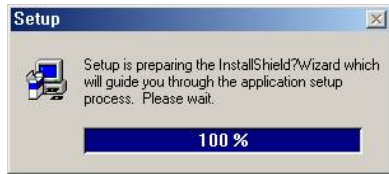

5) Press a <Next> button.




6) Press <Next> button.

(To change the directory of installation, press <Browse...> button as below and set the directory)



7) Press <Next> button, file will be copied.



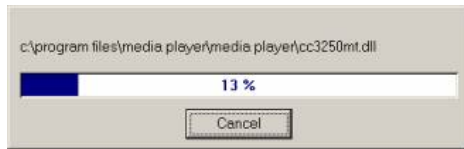

8) Press <Finish> button to finish the installation.



### Playback the recorded file

After installation, Basic screen is as belows. Detailed usage descriptions are followed in “ ? ” button placed the right top side of Express Media Player.







## Special Utility

### Special Utility Installation



- 1) All running programs should be closed before installation
- 2) Select ,Special Utility' of installation program menu in the CD,  
installation will start.
- 3) Preparing to install

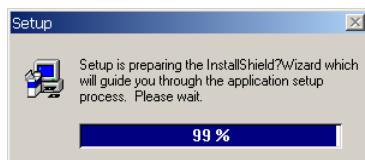

- 4) Press <Next> button  
(To change the directory of installation, press <Browse...> button as below and set the directory)

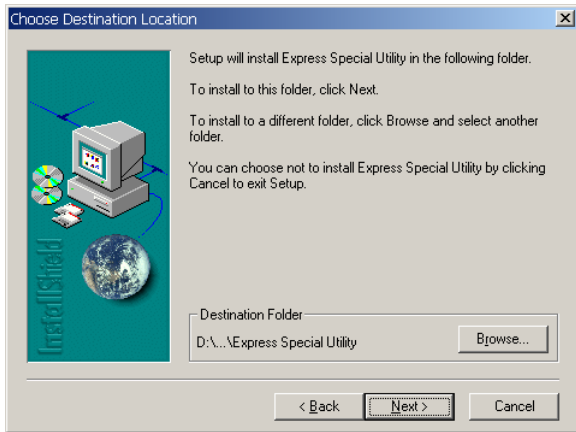


5) Press <Next> button, then, the installation will be completed after file copy.

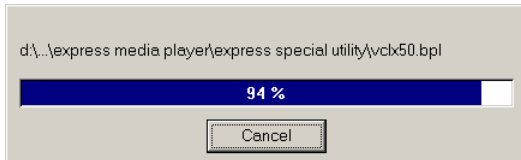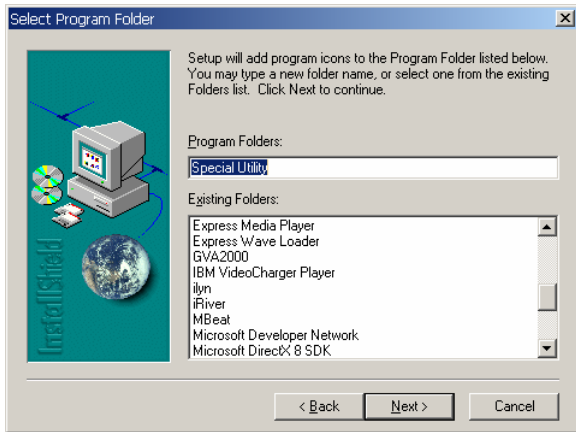



## Special Utility Execution




1. The icon „Express Special Utility“ will be created on the PC background when the installation is completed.
2. Double click the icon and execute it, the icon  will show up in System Tray.

## Connecting to PC

1. If player is connected to PC, the state icon will be changed like below

 : Before       : After

Note : In case of using Windows 98, please install the driver referring to the part „Mass Storage Driver Installation for Windows 98“.

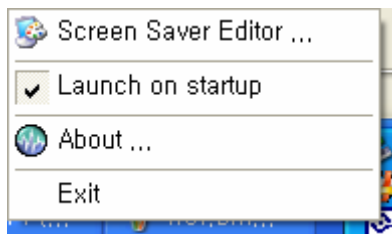


2. Utility menu will show up if place mouse point on state icon and click right button.

1) Screen Saver Editor : Edit the picture to make user selected picture be displayed on the LCD.

2) Launch on startup : In case of selection of this menu, program will be automatically executed when the system starts

## Using Screen Saver Editor

Edit the picture to make user selected picture be displayed on the LCD.

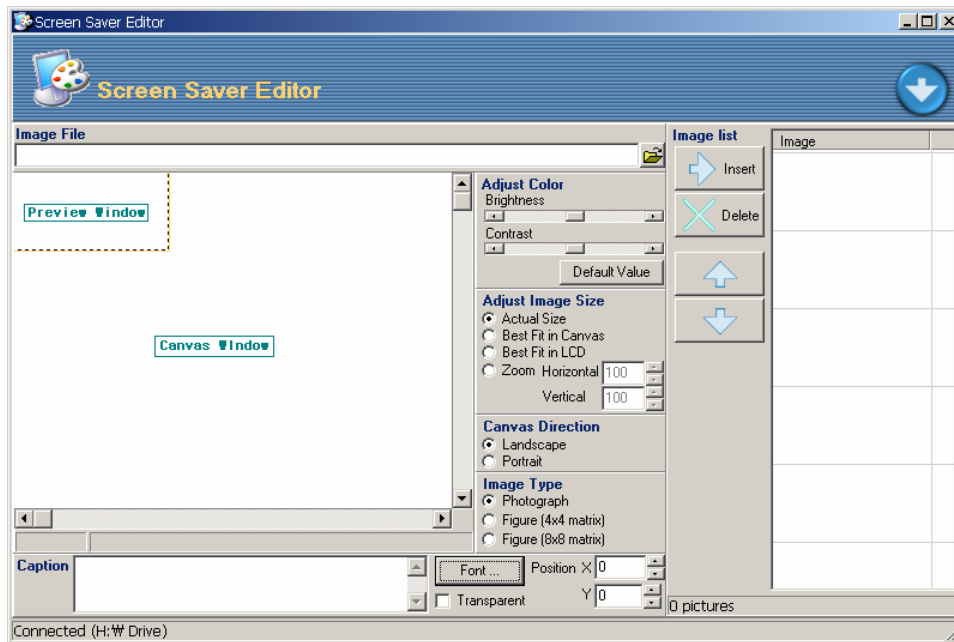

Screen Saver Editor will be executed when select „Screen Saver Editor“ in state icon menu.

### 1) Opening Image File



Import the file to be edited by pressing  button

### 2) Preview Window

Preview the file to be displayed on the LCD.

### 3) Color Adjusting

Adjust the Brightness and Contrast of Image.





<Before Adjusting>



<After Adjusting>

#### 4) Image Size Adjusting

Adjust the image size what user want.

- Actual Size : Adjust the size as same with original one.
- Best Fit in Canvas : Adjust the size same with Canvas window.
- Best Fit in LCD : Adjust the size same with Preview window.
- Zoom : Adjust the image size into what user want.

#### 5) Caption


Insert the caption into the image

- Caption Input Window : Input the caption in it.
- Position X,Y : Select the location where the caption is displayed.
- Transparent : Display overlapped image between caption and background.
- Font : Select the font of caption.

#### 6) Image Direction

Adjust the direction of image.

- Landscape : Adjust the image direction into horizontally.
- Portrait : Adjust the image direction into vertically.

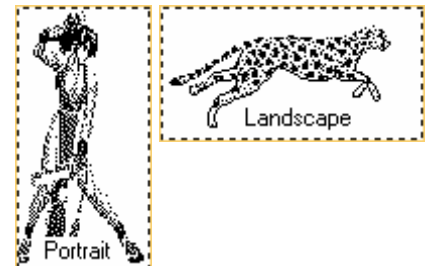

#### 7) GIF Animation

There are several images saved in one image file if the GIF supports animation.

- Show Animation : Use it when edit the images altogether.
- Show each frame : Use it when edit only one image.

#### 8) Image Type


Select the transformed type depending on original image type.



- Photograph : Select it if the original image is photograph.
- Figure : Select it if the original image is figure(diagram).

#### 9) Image List

If save the edited image into player, the saved image will display on the LCD when Screen Saver is on.

- Insert  : Add the edited image into the Image List.

- Delete  : Delete the selected image from the Image List.

- Changing Order   : Change the order of selected images in Image List.

#### 10) Saving



Save the edited image list in palyer.

## Specification

Item	Description					
<b>Audio</b>	Channel	Stereo				
	Frequency Range	20Hz ~ 20KHz				
	Earphone output	10mW + 10mW(16 ohm)				
	Speaker output	180mW(16ohm)				
	S/N Rate	90dB (MP3)				
<b>Recording</b>	Model Description	64MB	128MB	256MB	512MB	
	Time	SHQ	1Hrs. 05Min	2Hrs.10Min	4Hrs.25Min	8Hrs. 50Min
		HQ	2Hrs. 10Min	4Hrs. 25Min	8Hrs. 50Min	17Hrs. 40Min
		MQ	4Hrs. 25Min	8Hrs.50Min	17Hrs.40Min	35Hrs.20Min
		LQ	22Hrs.45Min	45Hrs. 30Min	91Hrs.	182Hrs.
	Sound Quality		SHQ : 128 Kbps(Mono or Stereo)			
			HQ : 64 Kbps(Mono or Stereo)			
MQ : 32 Kbps(Mono)						
LQ : 6 Kbps(Mono)						
<b>File Support</b>	Formats	MPEG 1/2.5 Layer3, WMA				
	Bit Rate	8Kbps ~ 320Kbps(MP3), 32Kbps ~ 192Kbps(WMA)				
	Tag	ID3 V1 Tag, ID3 V2 2.0, ID3 V2 3.0, ID3 V2 4.0				
<b>FM Radio</b>	Frequency Range	87.5~108MHz(Korea, U.S.A, Europe), 76~90MHz(Japan)				
	Earphone output	5mW x 2ch				
	S/N Rate	50dB				
	Antenna	Earphone Antenna				
<b>PC I Interface</b>	System	Pentium 133MHz, RAM64MB, 20MB Hard Disc				
	OS	Win98/ME/2000/XP				
	Sound Card	Sound Blaster				
<b>Power</b>	Battery	LR03 Type( AAA Size ) X 2 개				
<b>General</b>	Size(W*H*D)	100mm X 42mm X 13mm				
	Weight	49 g (Battery Excluding)				
	Operating Temp.	-0 °C ~ 40 °C				
	Memory	64M, 128MB, 256MB, 512MB Internal Memory				
	USB	USB 1.1				
	Battery life	MP3 Playing	Speaker : Approx. 20Hrs.(128kbps, Normal EQ, Vol.: 10)		Earphone : Approx. 21Hrs(128kbps, Normal EQ, Vol.: 10)	
			Voice Record Playing (LP Mode)			
		Voice Recording (LP Mode)	Speaker : Approx. 27Hrs(Vol.:10)		Earphone : Approx. 28Hrs(Vol.:10)	
			Radio Listening			
		Voice Recording (LP Mode)		Approx.16Hrs		51
Radio Listening		Approx. 31Hrs				

Note : It depends on the battery type and the using condition(Above data is according to the manufacturer's standard)

## Trouble shooting

Problem	Cause	Action
<b>No stable sound</b>	* Check the battery voltage	* Replace with a new battery.
	* Some problem exists on file itself.	* Do upload and playback in Manager program case of the same problem which is happened, please delete and download again.
	* Memory format is not properly worked.	* After formatting the memory, download again the song.
<b>Difficult to download the file</b>	* Check the battery shift	* Check battery polarity
	* Poor battery	* Replace with a new battery
	* Check hold key	* Release Hold key
<b>No response from button</b>	* Check the battery shift	* Check battery polarity
	* Poor battery	* Replace with a new battery
	* Check hold key	* Release Hold key
<b>No Playback</b>	* Volume set is very low	* Do control a proper volume set
	* USB connected	* Remove the USB cable from Unit

The contents of this User's Manual has a chance to alter without any notification for quality improvement.